

Low Voltage Disconnect Voltages

Measurement Point	Master Switch (over driver)	
	Off	On
Solar Panel Digital Display	12.40	12.40 (For Reference)
Vin to Ground Post	12.30	12.28
Vout to Ground Post	0.46	12.27 Shows that the master switch is controlling through the LVD!
Sensor Post to Ground Post	12.29	12.27
Alarm Post to Ground Post	1.00	11.80 Not sure what this means
Manual O/R Post to Ground Post	0.00	9.85 Not sure what this means

