

NT MODEL FURNACES

Use this chart to determine the correct core replacement.

IF YOU HAVE THIS MODEL	ORDER THIS REPLACEMENT CORE
NT-16S	CORE
2009	STOCK #: 2611A MODEL #: RP-16NQ
2420	
NT-16SQ	CORE
2425	STOCK #: 2611A MODEL #: RP-16NQ
2426	
2444	
2445	
NT-20S	CORE
2019	STOCK #: 2611A MODEL #: RP-16NQ
2281	
NT-20SQ	CORE
2432	STOCK #: 2611A MODEL #: RP-16NQ
2433A	
2450A	
2452A	
NT-30SP	CORE
2060	STOCK #: 2613A MODEL #: RP-30N
2373	
2453	
NT-34SP	CORE
2603	STOCK #: 2613A MODEL #: RP-30N
2374	
2454	
NT-40	CORE
2051	STOCK #: 2614A MODEL #: RP-40N
2455	
P-40	CORE
2230	STOCK #: 2615A MODEL #: RP-40P
2456	

IF YOU HAVE THIS MODEL	ORDER THIS REPLACEMENT CORE
NT-16SEQ	CORE
2017	STOCK #: 2612A MODEL #: RP-16NEQ
2314	
2315	
2316	
2364	
2375	
2380	
2427	
2428	
2429	
2431	
2438	
2439	
2440	
2441	
2442	
2443	
2500	
2503	
2505	
2507	

IF YOU HAVE THIS MODEL	ORDER THIS REPLACEMENT CORE
NT-20SEQ	CORE
2021	STOCK #: 2612A MODEL #: RP-16NEQ
2307	
2347	
2348	
2349	
2435	
2436	
2437	
2446	
2447	
2448	
2449	
2501	
2504	
2506	